


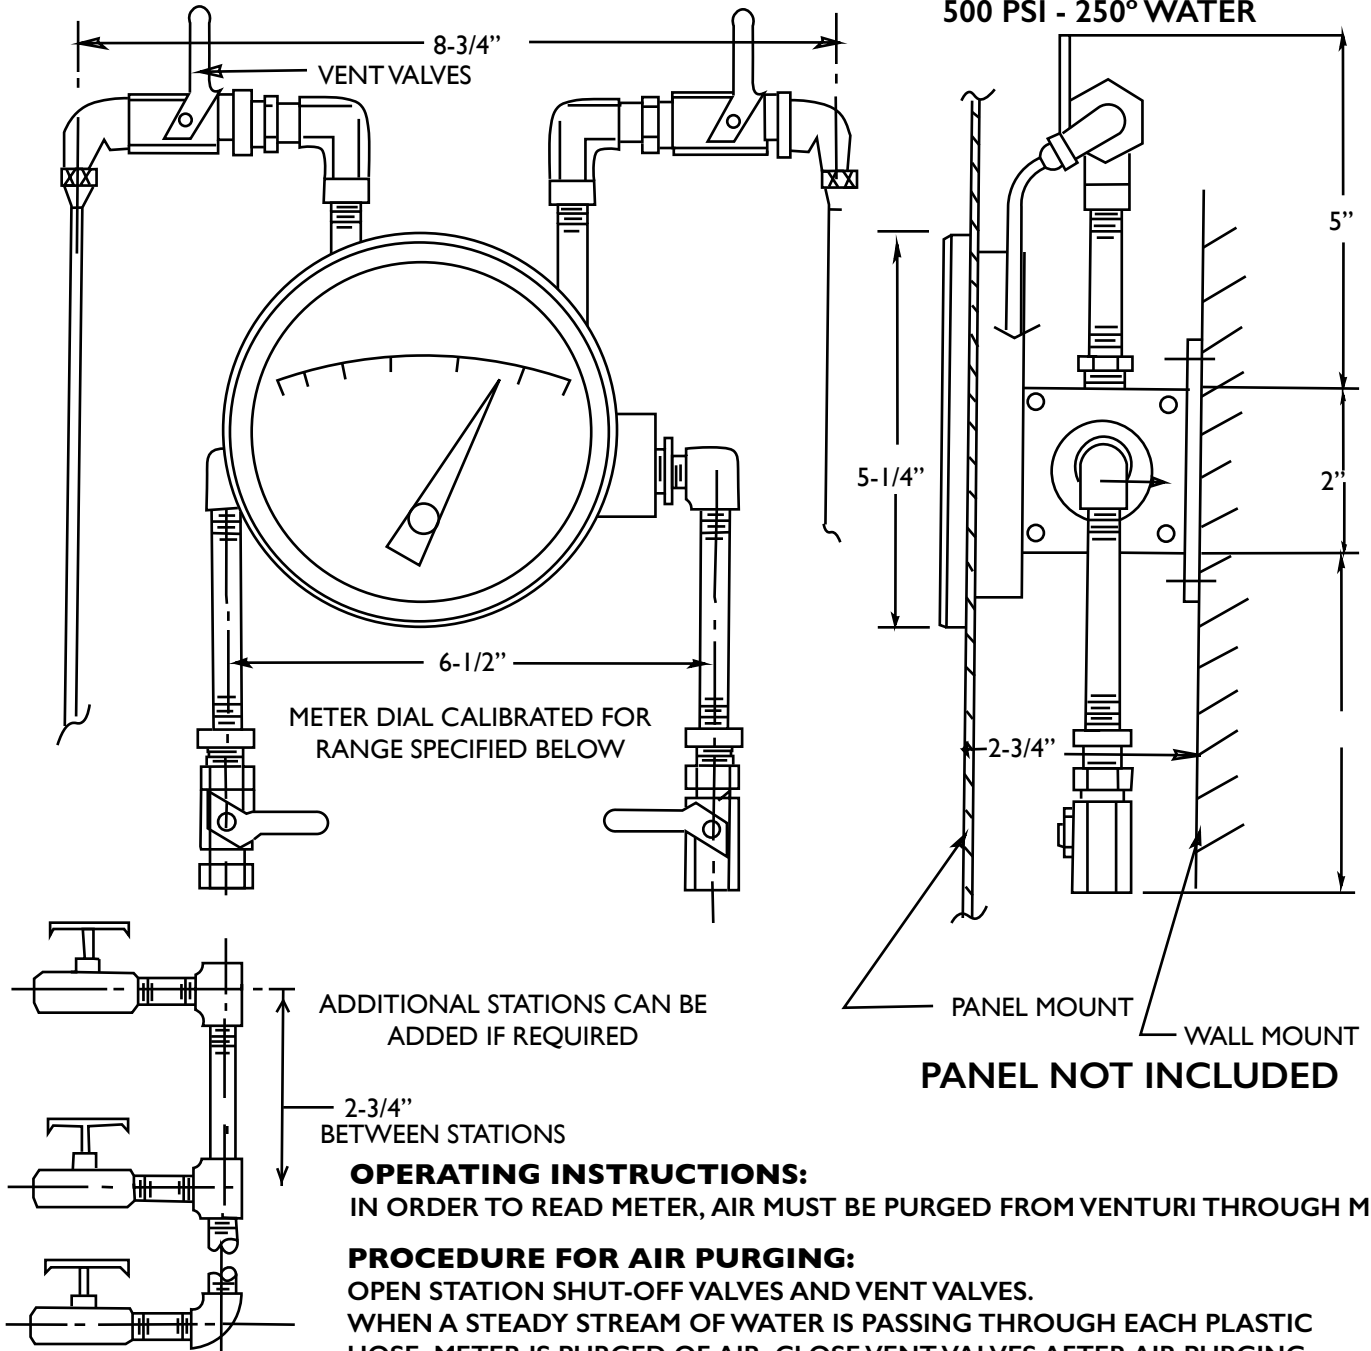

MODEL R-PW

4-1/2" DIAL DIFFERENTIAL METER FOR WALL OR PANEL MOUNTING

500 PSI - 250° WATER



OPERATING INSTRUCTIONS:

IN ORDER TO READ METER, AIR MUST BE PURGED FROM VENTURI THROUGH METER

PROCEDURE FOR AIR PURGING:

OPEN STATION SHUT-OFF VALVES AND VENT VALVES.

WHEN A STEADY STREAM OF WATER IS PASSING THROUGH EACH PLASTIC HOSE, METER IS PURGED OF AIR. CLOSE VENT VALVES AFTER AIR PURGING.

PURGING SHOULD BE DONE OCCASIONALLY TO INSURE ACCURATE READINGS.

